

TufflineTV® Setting up

550x1630 TufflineTV®

- 1** Connect power cord to the TufflineTV as shown.




The side with the holes goes in first.



Gently insert your media card. The side with the holes goes in first.

Do not force.

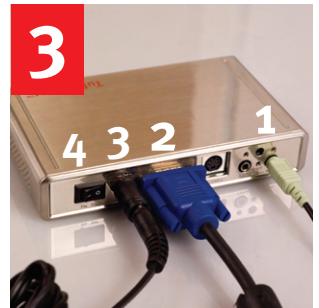

Make sure that:

1. Speaker plug is connected.
2. Monitor plug is connected.
3. Power plug is connected.
4. Turn media power on and the presentation will start.

Applying Graphic Panel

To apply the graphic, simply line up the top corners and slowly roll the graphic down, aligning the edges and magnetic strip to the steel tape behind.




Removing Graphic Panel




To remove the graphic apply the suction cup to top left corner, pull graphic panel away from frame then run a finger behind graphic to other corner. Lift away and roll down frame.




Media Player Remote Control

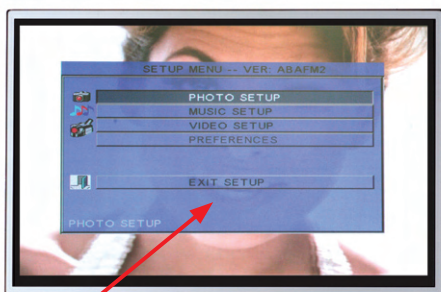


- 1 Main Menu.** Press set-up button then use scroll buttons to select category - Photo, Music or Video then press select. Press exit setup to leave the menu.

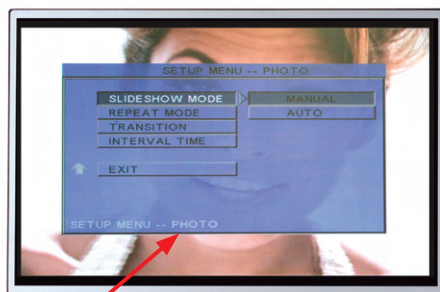

- 2 Photo set-up Menu.** Use scroll buttons to select category, then press select.

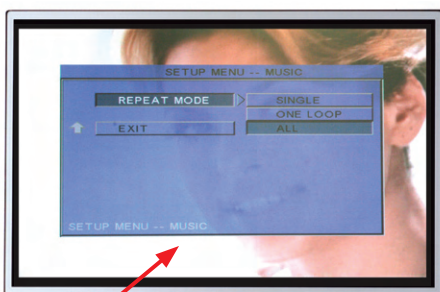


- 3 Music Set-up Menu.** Use scroll buttons to select category, then press select.

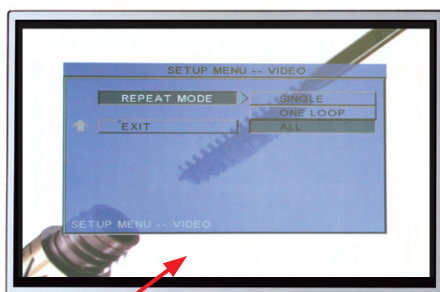


- 4 Video Set-up Menu.** Use scroll buttons to select category, then press select.

The media player has already been set-up for video in the factory, do not change settings.

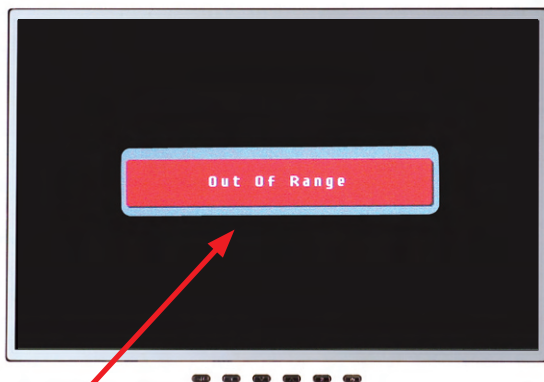


5 Out of Range Screen. If this appears press output button for 2 seconds to resume normal playing. The output button may need to be pressed up to 3 times.

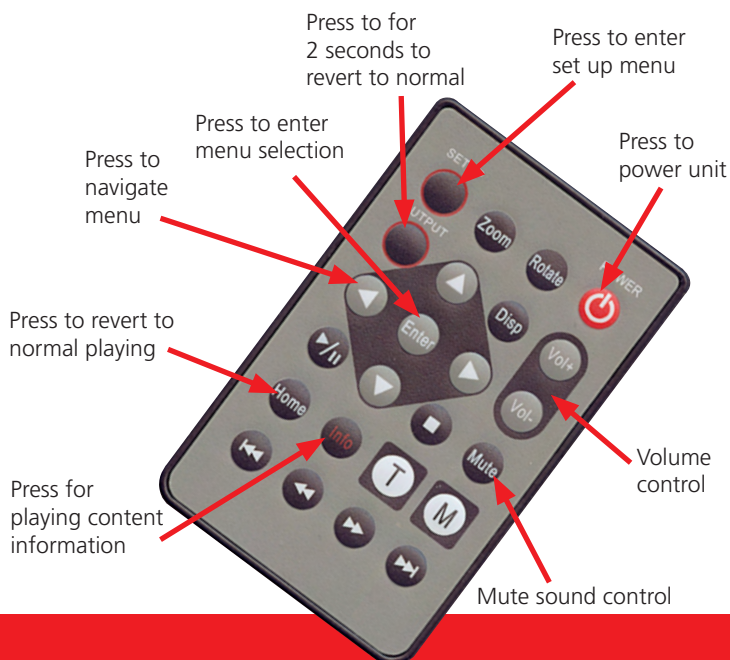

OSD (On Screen Display) Controls

Use the buttons on the front control panel to display and adjust the OSD controls which display on the screen. The OSD controls are explained at the top of the next page.

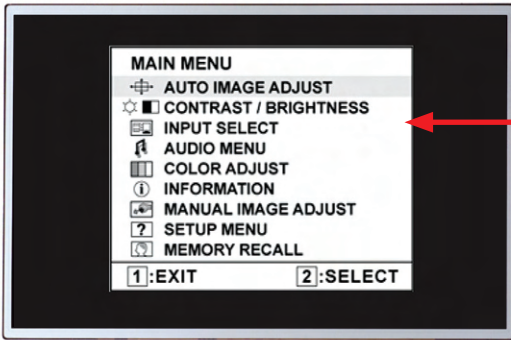

Main Menu with OSD controls



Front Control Panel shown below in detail

Displays the Main Menu or exits the control screen and saves adjustments.


Scrolls through menu options and adjusts the displayed control. Also a shortcut to display the Contrast adjustment control screen.

Displays the control screen for the highlighted control. Also toggles between two controls on some screens. Also a shortcut to toggle analog and digital connection.

Audio Mute button turns the sound off

Power light
Green = ON
Orange = Power Saving


Standby Power On/Off

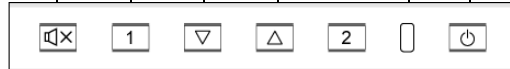

The screen has already been set-up in the factory, do not change settings.


Do the following to adjust the display setting:

1. To display the Main Menu, press button [1].

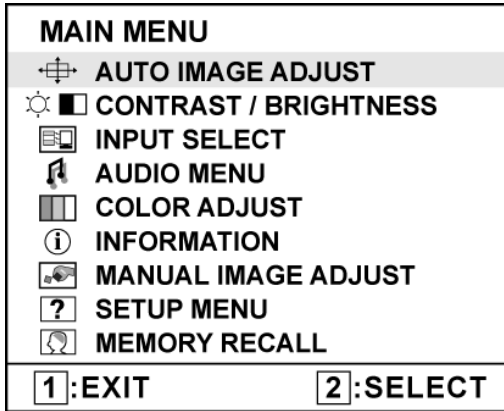


NOTE: All OSD menus and adjustment screens disappear automatically after about 15 seconds. This is adjustable through the OSD timeout setting in the setup menu.

2. To select a control to adjust, press ▲ or ▼ to scroll up or down in the Main Menu.
3. After the desired control is selected, press button [2]. A control screen like the one shown below appears.

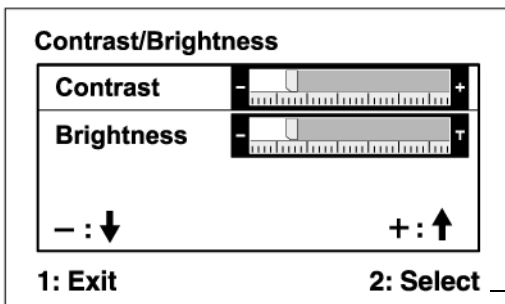

The command line at the bottom of the control screen tells what to do next from this screen. You can toggle between control screens, adjust the selected option, or exit the screen.

- 
4. To adjust the setting, press the up ▲ or down ▼ buttons.
 5. To save the adjustments and exit the menu, press button [1] twice.

The following tips may help you optimize your display:

- Adjust the computer's graphics card so that it outputs a 1440 x 900 @ 60Hz video signal to the LCD display. (Look for instructions on "changing the refresh rate" in the graphics card's user guide.)
- If necessary, make small adjustments using H. POSITION and V. POSITION until the screen image is completely visible. (The black border around the edge of the screen should barely touch the illuminated "active area" of the LCD display.)